

## H SERIES – MANUAL

### SPECIFICATIONS

Working medium	Clean air
Working pressure	0 to 8 bar
Guaranteed pressure	12 bar
Working temperature	-5°C to +60°C
Valve type	3/2, 5/2 & 5/3
Seal material	NBR
Acting type	Manual



3630

### 3/2 LEVER / SPRING SPRING RETURN

PART NUMBER	FUNCTION	PORT SIZE
EM-H321-06S	3/2	1/8"
EM-H322-08S	3/2	1/4"
EM-H323-10S	3/2	3/8"
EM-H324-15S	3/2	1/2"



3640

### 5/3 LEVER / SPRING / LEVER SPRING TO CENTRE – CENTRES CLOSED

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H531C-06S	5/3	1/8"	1/8"
EM-H532C-08S	5/3	1/8"	1/4"
EM-H533C-10S	5/3	1/4"	3/8"
EM-H534C-15S	5/3	1/2"	1/2"



3630

### 3/2 LEVER / LEVER DETENTED

PART NUMBER	FUNCTION	PORT SIZE
EM-H321-06	3/2	1/8"
EM-H322-08	3/2	1/4"
EM-H323-10	3/2	3/8"
EM-H324-15	3/2	1/2"



3630

### 5/3 LEVER / SPRING / LEVER SPRING TO CENTRE – CENTRES EXHAUST

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H531E-06S	5/3	1/8"	1/8"
EM-H532E-08S	5/3	1/8"	1/4"
EM-H533E-10S	5/3	1/4"	3/8"
EM-H534E-15S	5/3	1/2"	1/2"



3630

### 5/2 LEVER / SPRING SPRING RETURN

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H521-06S	5/2	1/8"	1/8"
EM-H522-08S	5/2	1/8"	1/4"
EM-H523-10S	5/2	1/4"	3/8"
EM-H524-15S	5/2	1/2"	1/2"



3630

### 5/3 LEVER / SPRING / LEVER MANUAL – PRESSURED CENTRES

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H531P-06S	5/3	1/8"	1/8"
EM-H532P-08S	5/3	1/8"	1/4"
EM-H533P-10S	5/3	1/4"	3/8"
EM-H534P-15S	5/3	1/2"	1/2"



3630

### 5/2 LEVER / LEVER DETENTED

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H521-06	5/2	1/8"	1/8"
EM-H522-08	5/2	1/8"	1/4"
EM-H523-10	5/2	1/4"	3/8"
EM-H524-15	5/2	1/2"	1/2"



3630

### 5/3 LEVER / LEVER / LEVER DETENTED – CENTRES CLOSED

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H531C-06	5/3	1/8"	1/8"
EM-H532C-08	5/3	1/8"	1/4"
EM-H533C-10	5/3	1/4"	3/8"
EM-H534C-15	5/3	1/2"	1/2"