

H SERIES – MECHANICAL

SPECIFICATIONS

Working medium	Clean air
Working pressure	0 to 8 bar
Guaranteed pressure	12 bar
Working temperature	-5°C to +60°C
Valve type	5/3
Seal material	NBR
Acting type	External control



3630

5/3 LEVER / LEVER / LEVER MANUAL – CENTRES EXHAUST

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H531E-06	5/3	1/8"	1/8"
EM-H532E-08	5/3	1/8"	1/4"
EM-H533E-10	5/3	1/4"	3/8"
EM-H534E-15	5/3	1/2"	1/2"



3630

5/3 LEVER / LEVER / LEVER MANUAL – PRESSURED CENTRES

PART NUMBER	FUNCTION	EXHAUST	INLET
EM-H531P-06	5/3	1/8"	1/8"
EM-H532P-08	5/3	1/8"	1/4"
EM-H533P-10	5/3	1/4"	3/8"
EM-H534P-15	5/3	1/2"	1/2"



 
3630

4/3 ROTARY LEVER VALVE

PART NUMBER	FUNCTION	PORT SIZE
EM-R432-08	4/3	1/4" BSPP
EM-R432-10	4/3	3/8" BSPP
EM-R432-15	4/3	1/2" BSPP

SPECIFICATIONS

Control type	Manual
Working pressure	0 to 8 bar
Working temperature	-5°C to +60°C



3630

FOOT VALVE

PART NUMBER	FUNCTION	DESCRIPTION	PORT SIZE
EM-F322-08	3/2	Foot valve no cover	1/4"
EM-F422-08	4/2	Foot valve no cover	1/4"
EM-F522C-08L	5/2	Foot pedal with lock & cover	1/4"

L SERIES – MANUAL

SPECIFICATIONS

Working medium	Clean air
Working pressure	0 to 8 bar
Guaranteed pressure	12 bar
Working temperature	-5°C to +60°C
Valve type	3/2 & 5/2
Acting type	Manual



3630

3/2 & 5/2 BUTTON VALVE DETENTED

PART NUMBER	FUNCTION	PORT SIZE
EM-L321-06	3/2	1/8"
EM-L322-08	3/2	1/4"
EM-L323-10	3/2	3/8"
EM-L324-15	3/2	1/2"
EM-L521-06	5/2	1/8"
EM-L522-08	5/2	1/4"
EM-L523-10	5/2	3/8"
EM-L524-15	5/2	1/2"

SPECIFICATIONS

Working medium	Clean air
Working pressure	0 – 8 bar
Guaranteed pressure	12 bar
Working temperature	-5°C to +60°C
Valve type	3/2 & 5/2
Acting type	External control



3630

3/2 & 5/2 HAND PULL VALVE BUTTON SPRING

PART NUMBER	FUNCTION	PORT SIZE
EM-L321-06S	3/2	1/8"
EM-L322-08S	3/2	1/4"
EM-L323-10S	3/2	3/8"
EM-L324-15S	3/2	1/2"
EM-L521-06S	5/2	1/8"
EM-L522-08S	5/2	1/4"
EM-L523-10S	5/2	3/8"
EM-L524-15S	5/2	1/2"