




BALL VALVES

To insert the tube into the fitting, insert it fully to the end, & to release, shut off the compressed air & push the sleeve gently to pull the tube out.

Be sure to select the product according to your needs, as hand valves vent the downstream line using a three-way method, so leakage may occur when fluids other than air are applied.

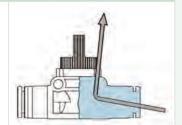

METRIC TUBE TO TUBE

STRAIGHT UNION VALVE EXHAUSTING SOLD IN PACKS OF 10



| PART NUMBER | TUBE OD A | TUBE OD B | |
|-------------|-----------|-----------|--|
| CDHVU0404 | 4 mm | 4 mm | |
| CDHVU0606 | 6 mm | 6 mm | |
| CDHVU0806 | 8 mm | 6 mm | |
| CDHVU0808 | 8 mm | 8 mm | |
| CDHVU1008 | 10 mm | 8 mm | |
| CDHVU1010 | 10 mm | 10 mm | |
| CDHVU1210 | 12 mm | 10 mm | |
| CDHVU1212 | 12 mm | 12 mm | |

BSPT THREAD

HAND VALVE VALVE EXHAUSTING BSPT MALE SOLD IN PACKS OF 10



| PART NUMBER | THREAD A | THREAD B | |
|-------------|-----------|-----------|--|
| CDHVM0101 | 1/8" BSPT | 1/8" BSPT | |
| CDHVM0201 | 1/4" BSPT | 1/8" BSPT | |
| CDHVM0202 | 1/4" BSPT | 1/4" BSPT | |
| CDHVM0302 | 3/8" BSPT | 1/4" BSPT | |
| CDHVM0303 | 3/8" BSPT | 3/8" BSPT | |
| CDHVM0403 | 1/2" BSPT | 3/8" BSPT | |
| CDHVM0404 | 1/2" BSPT | 1/2" BSPT | |

BSPP THREAD

HAND VALVE VALVE EXHAUSTING BSPP MALE SOLD IN PACKS OF 10



| PART NUMBER | THREAD A | THREAD B | |
|-------------|-----------|-----------|--|
| CDHVMG0101 | 1/8" BSPP | 1/8" BSPP | |
| CDHVMG0201 | 1/4" BSPP | 1/8" BSPP | |
| CDHVMG0202 | 1/4" BSPP | 1/4" BSPP | |
| CDHVMG0302 | 3/8" BSPP | 1/4" BSPP | |
| CDHVMG0303 | 3/8" BSPP | 3/8" BSPP | |
| CDHVMG0403 | 1/2" BSPP | 3/8" BSPP | |
| CDHVMG0404 | 1/2" BSPP | 1/2" BSPP | |

SLIDE VALVES

HAND SLIDE VALVE METRIC MALE SOLD IN PACKS OF 10



| OOLD IN I AONO | 3700 | |
|----------------|-----------|--|
| PART NUMBER | THREAD | |
| CDHSVM-M5 | M5 x 0.8 | |
| BSPT MALE | | |
| CDHSVM-01 | 1/8" BSPT | |
| CDHSVM-02 | 1/4" BSPT | |
| CDHSVM-03 | 3/8" BSPT | |
| CDHSVM-04 | 1/2" BSPT | |
| CDHSVM-06 | 3/4" BSPT | |