HOSETAILS & ADAPTORS - PLATED BRASS

3510

 
REDUCING BUSH

BSPT MALE / BSPP FEMALE

PART NUMBER	MALE THREAD	FEMALE THREAD	
BMFB 04/02	1/4" BSPT	1/8" BSPP	
BMFB 06/02	3/8" BSPT	1/8" BSPP	
BMFB 06/04	3/8" BSPT	1/4" BSPP	
BMFB 08/02	1/2" BSPT	1/8" BSPP	
BMFB 08/04	1/2" BSPT	1/4" BSPP	
BMFB 08/06	1/2" BSPT	3/8" BSPP	
BMFB 12/04	3/4" BSPT	1/4" BSPP	
BMFB 12/06	3/4" BSPT	3/8" BSPP	
BMFB 12/08	3/4" BSPT	1/2" BSPP	
BMFB 16/06	1" BSPT	3/8" BSPP	
BMFB 16/08	1" BSPT	1/2" BSPP	
BMFB 16/12	1" BSPT	3/4" BSPP	

EQUAL CONNECTOR

BSPT MALE





EQUAL CONNECTOR

BSPP FEMALE

3510

PART NUMBER	THREAD
BFFA 02	1/8" BSPP
BFFA 04	1/4" BSPP
BFFA 06	3/8" BSPP
BFFA 08	1/2" BSPP
BFFA 12	3/4" BSPP
BFFA 16	1" BSPP

REDUCING CONNECTOR

BSPT MALE

PART NUMBER	THREAD	THREAD	
BRC 04/02	1/4" BSPT	1/8" BSPT	
BRC 06/02	3/8" BSPT	1/8" BSPT	
BRC 06/04	3/8" BSPT	1/4" BSPT	
BRC 08/02	1/2" BSPT	1/8" BSPT	
BRC 08/04	1/2" BSPT	1/4" BSPT	
BRC 08/06	1/2" BSPT	3/8" BSPT	
BRC 12/04	3/4" BSPT	1/4" BSPT	
BRC 12/06	3/4" BSPT	3/8" BSPT	
BRC 12/08	3/4" BSPT	1/2" BSPT	
BRC 16/08	1" BSPT	1/2" BSPT	
BRC 16/12	1" BSPT	3/4" BSPT	

REDUCING CONNECTOR

BSPT MALE / BSPP FEMALE

BOI I MALL / BO	I I LIWIALL		3310
PART NUMBER	MALE THREAD	FEMALE THREAD	
BMFR 02/04	1/8" BSPT	1/4" BSPP	
BMFR 04/04	1/4" BSPT	1/4" BSPP	
BMFR 04/06	1/4" BSPT	3/8" BSPP	
BMFR 04/08	1/4" BSPT	1/2" BSPP	
BMFR 06/06	3/8" BSPT	3/8" BSPP	
BMFR 06/08	3/8" BSPT	1/2" BSPP	
BMFR 08/12	1/2" BSPT	3/4" BSPP	
BMFR 12/16	3/4" BSPT	1" BSPP	



HOSETAIL REPAIR CONNECTOR

PART NUMBER	HOSE ID	HOSE ID	
BHRC 02/02	1/8"	1/8"	
BHRC 03/03	3/16"	3/16"	
BHRC 04/04	1/4"	1/4"	
BHRC 05/05	5/16"	5/16"	
BHRC 06/04	3/8"	1/4"	
BHRC 06/06	3/8"	3/8"	
BHRC 08/04	1/2"	1/4"	
BHRC 08/06	1/2"	3/8"	
BHRC 08/08	1/2"	1/2"	
BHRC 08/09	1/2"	9/16"	
BHRC 10/10	5/8"	5/8"	
BHRC 12/12	3/4"	3/4"	
BHRC 16/16	1"	1"	

Do you also need?

PARKAIR®



Assembly lubricant

Find it on page 933, section fifteen

Please note: hosetails in this range are an interference fit