


**OPERATING INSTRUCTIONS**


# **WEO PLUG-IN**




# CONNECTION

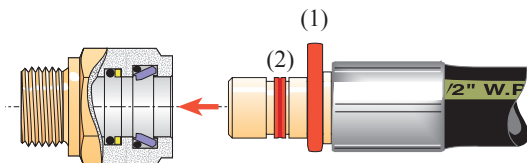

**Mount the assembly stop (1) on the male part and make sure that the release ring (2) slides easily in the groove.**

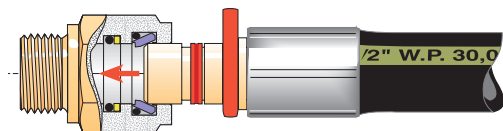


The male part is pushed into the female part until the assembly stop reaches the female part. **Pull back to verify a proper connection has been made\*.**

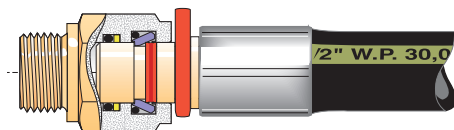


The coupling is now connected and locked.

\* An improper connection may result in a sudden assembly failure with a potential for personal injury.


# DISCONNECTION

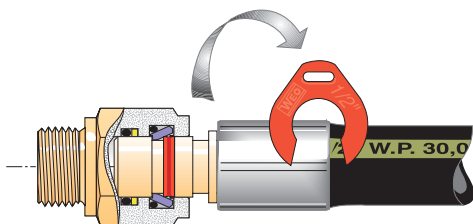

Remove the assembly stop (e.g. by using a screw driver etc.)

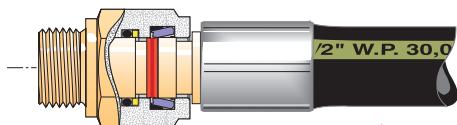

Push the male part completely into the female part.

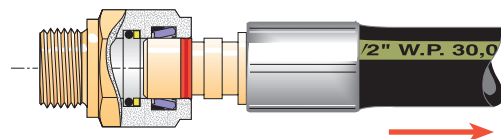

Pull the male part out of the female part. **Mount the assembly stop on the male part again.**

**Crimping Instructions is supplied by  
your WEO Plug-In supplier or can be  
downloaded from [www.cejn.com](http://www.cejn.com)**

**Temperature range**

-30° – +100° C

**Working Pressure and safety factors**

A maximum working pressure of 350 bar applies to sizes between 1/4"–3/4". Maximum working pressure for 1" couplings is 250 bar.

Note: Working pressure may vary between connections,  
see information for respective product.

**CEJN AB**

Hasslumsvägen 33, Box 245, SE – 541 25 Skövde  
Tel. +46 (0)500 47 75 00, Fax. +46 (0)500 48 07 16  
[www.cejn.com](http://www.cejn.com)